
Emergency Procedure (Grob Twin 2)

1. Emergency Parachute

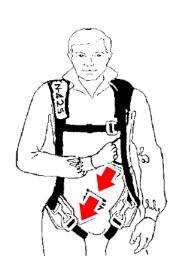

The Emergency Parachute is manually activated by pulling the <u>ripcord handle</u>. We recommend having the ripcord handle in sight or in hand when exiting the aircraft.


The ripcord handle is to be firmly gripped, typically with the right hand (the left hand or both hands may be used if necessary). After the handle is removed from the pocket, there is approximately 2" of slack in the ripcord cable to be removed before the pins are pulled. The ripcord is pulled to full arm length with a down-ward stroke. The parachute will normally open fully within 3 seconds



2. Canopy Jettison and Emergency Exit from the glider



- 1) Pull <u>red handles</u> on right and left side of canopy full back simultaneously
- 2) Push canopy up and away with the left hand
- 3) Release safety harness (Rotate buckle cover will release all harness)
- 4) Stand up and get out over left or right side depending on the attitude.
- 5) Grip ripcord handle of the parachute and pull down with both hands

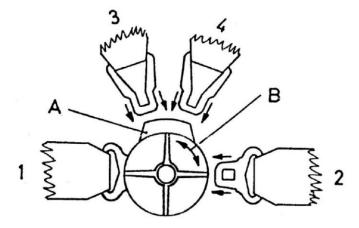

Clockwise or counterclockwise rotation of the rotary buckle cover (B) releases all but one belt at the same time.





